

## GETTING STARTED

1. Review the next section below to see if your existing window frames are compatible with QUICKFIT.
2. We'll show how to best measure your permanent window frames.
3. Using these measurements and your ship-to address, we'll determine the delivered cost. With your acceptance, we'll build you a set of our high quality QUICKFIT WINDOW INSERTS™. This includes crystal-clear UV resistant, almost 1/8" thick acrylic panes with unique sturdy PVC frame segments that expand to fit into the permanent window frames in your home or office.
4. We'll build and ship an insert from your order to test.
5. You'll be able to install and remove it in seconds without tools or fasteners.




## DETERMINE IF QUICKFIT WINDOW INSERTS™ WILL WORK IN YOUR HOME OR OFFICE

- Existing window frame surfaces should be flat and at least 1/2" deep.
- Window opening handles may need to be removed.
- Shades, blinds and curtains need adequate clearance for proper operation. QUICKFIT measures just under 1" thickness, including handgrip.
- Some window frames in older homes are not perfectly square but QUICKFIT is designed to self-adjust.



## HOW TO MEASURE YOUR PERMANENT WINDOW FRAMES

- Using our "Permanent Window Frame Measurements Form", please fill in dimensions in inches to the nearest 1/16".

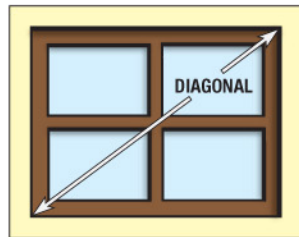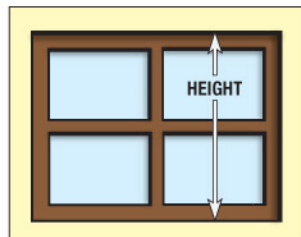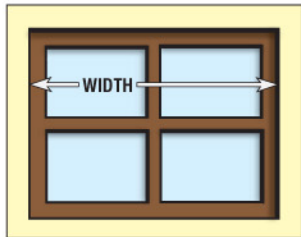

## UNPACKING AND INSTALLATION

**IMPORTANT:** When unpacking, don't remove the protective plastic covering on the acrylic pane. Wait until after you have done a test installation of the insert by following the installation instructions below to confirm that it fits properly. Then prepare a clean, dust-free surface to place the insert on. Remove the insert from the permanent window frame, place it on the clean surface and separate the frame segments from the pane in order to peel off the plastic film. Re-assemble the window insert.

Temporarily remove hardware of shades, blinds or curtains that may restrict access to window areas.

Have a step ladder handy. Rest the lower insert frame segment on the lower horizontal permanent window frame surface and, at the same time, position one of the vertical insert frame segments against its corresponding permanent window frame surface.

Next, push against the opposite vertical insert frame segment, compressing the insert so it fits into the window frame. Then, push down on the upper insert segment and press it into the upper window frame.

Finally, remove the corner caps from the horizontal frame segments and snap them back on as shown to seal corners. Repeat for caps on vertical segments. Be careful not to move the insert out of position in the window frame when snapping the caps in place.



### IMPORTANT FOR SAFETY

Make sure **everyone** knows how QUICKFIT removes instantly for access to existing windows in case of emergency.

**Never remove safety labels.**



by **Kömtrac**

[www.quickfitwindowinserts.com](http://www.quickfitwindowinserts.com)